

## WINSTAR Display Co.,Ltd.

5F., No.31, Keya Rd., Daya Dist., Taichung City 428, Taiwan
TEL/+886-4-2568 9987 FAX/+886-4-2586 7763 E-mail/Sales@winstar.com.tw

Subject: Comparing Winstar HDMI board to supporting different Raspberry PI version. The outline appearance and construction are all keep the same, the only difference is in the CON4 and CON5.

Comparing the end of the parts number in "X#" and "V#"

For example parts number	WF50BTIFGDHGX# Supporting Raspberry Pi1 ~ Pi3/Pi3B Only					WF50BTIFGDHGV#  Supporting Raspberry Pi Pi1 ~ Pi3/Pi3B and Pi3B+					
Scope of use											
CON4/CON5 (PIN Define)	. LCM PIN Definition(CON4/CON5)					LCM PIN Definition(CON4)					
	Pin∉	1 ******	Function	Remark₽		Pin∉		Function <sub>e</sub>	Remark∂		
(1 114 2011110)	l <del> </del>	<u> </u>				1 <i>₽</i>	NC∉ NC∉	No connection ∂  No connection ∂	<i>₽</i>		
	1₽	3.3V₽	1 2				LCM PIN Definition(CON5)		+		
	17₽	3.3V₽	Raspberry Pi:3.3V	₽		Pin₽		Function₽	Remark∂		
		•	•	'		1∉	3.3V₽	TFT Module Power limit can only output 3.3V,100mA	NOTE1₽		
						17₽	3.3V₽	TFT Module Power limit can only output 3.3V,100mA <sub>€</sub>	NOTE1₽		
						Note1: The 3.3V supply current is limited in 100mA; please note.					
CON4 different (CON4 Drawing)		40						40 00000000000000000000000000000000000			




## WINSTAR Display Co.,Ltd.

5F., No.31, Keya Rd., Daya Dist., Taichung City 428, Taiwan
TEL/+886-4-2588 9987 FAX/+886-4-2586 7763 E-mail/Sales@winstar.com.tw


(T)

40

(0)

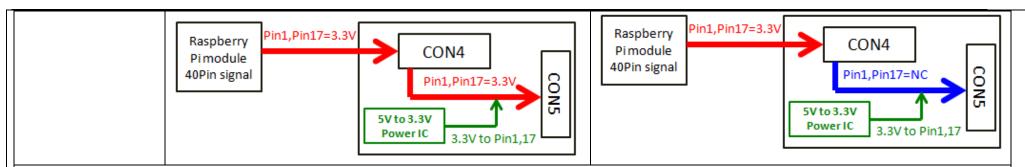


If we keep input 3.3V from CON4 for Raspberry Pi 3B+, the display is error. After changing 3.3V to NC, the display is working correct. In order to support the new version of Raspberry [Pi3B+], we develop the new version in V#.

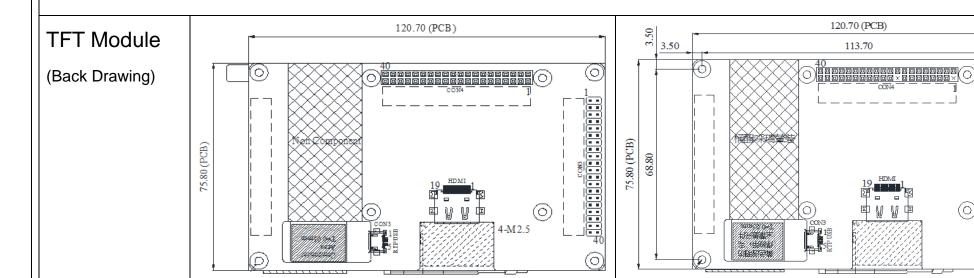



## MINSTAR Display Co.,Ltd.

5F., No.31, Keya Rd., Daya Dist., Taichung City 428, Taiwan
TEL/+886-4-2588 9987 FAX/+886-4-2586 7763 E-mail/Sales@winstar.com.tw

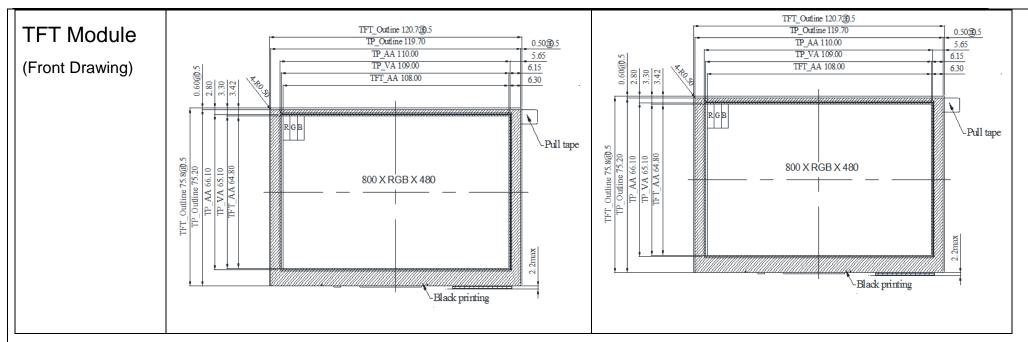

For the new project, please promote in V# for further.

Reviewers: Eric Liang Maker: KENI LIN Time: 2019/6/24