


# Soldering Iron User Manual

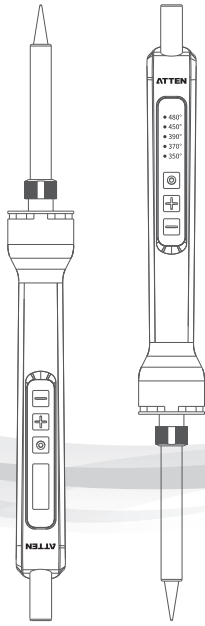

SHENZHEN ATTEN TECHNOLOGY CO.,LTD.

The soldering iron needs to be tested before it leaves the factory, so the soldering tip may cover a small amount of tin, and the casing will be slightly yellowing, which is a normal phenomenon.

## 1. Copyright information

The design of this product (including internal software) and its accessories is under the protection of relevant state laws. Any violation of the relevant rights of our company will be subject to legal sanctions. Users shall consciously abide by the relevant state laws when using this products.

## 2. Disclaimer

We will take no responsibility for any personal injury or property damage caused by reasons other than the product quality problem, which may include force majeure (natural disasters, etc) or personal behavior during the operation of this product. This manual is organized, compiled and released by SHENZHEN ATTEN TECHNOLOGY CO., LTD. according to the latest product features. We will not responsible for further notice of the subsequent improvement of the product and this manual.

## 3. Essential knowledge for users

Users are required to have basic knowledge of common sense and electrical operations before using the product. Minors shall use the product under the guidance of a professional or guardian.

## 4. Product overview

This product is a portable, temperature-adjustable, high-temperature control soldering iron. The ceramic heating core uses a three-core grounded power cable to effectively ensure the safety of the welding operation.


## 5. Features

- \* Automatically sleep after 10 minutes and shut down after 20 minutes when the product stop operating
- Products use LCD display and LED display design
- Build in PID system, adjust temperature by button, operate easily.
- The handle structure is ergonomically designed for comfortable grip.
- Display the temperature control status with a bright blue LED.
- The heating wire and sensor are made of PTC material, which is quick in temperature rise and precise in temperature control.
- Auto-standby, auto-shut down is available.
- Using 3 cored power cable.

## (ST-2080D/ST-2150D)

### Product feature

\*Remark: ST-2080D/ST-2150D with LCD display.

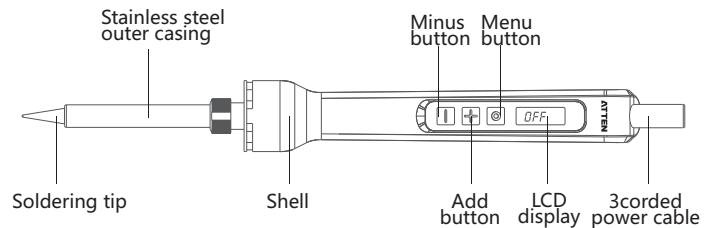

## 6. Specification

| Item No.              | ST-2080              | ST-2150              | ST-2080D             | ST-2150D             |
|-----------------------|----------------------|----------------------|----------------------|----------------------|
| Voltage               | 110/240VAC           | 110/240VAC           | 110/240VAC           | 110/240VAC           |
| Power                 | 80W                  | 150W                 | 80W                  | 150W                 |
| Temperature range     | 5set adjustment      | 5set adjustment      | 250°C~480°C          | 250°C~480°C          |
| Temperature accuracy  | ±10°C                | ±10°C                | ±10°C                | ±10°C                |
| Temperature stability | ±2°C                 | ±2°C                 | ±2°C                 | ±2°C                 |
| Heater                | Four-core PTC heater | Four-core PTC heater | Four-core PTC heater | Four-core PTC heater |
| Heating indication    | Blue LED             | Blue LED             | Blue LED             | Blue LED             |
| Temperature unit      | °C                   | °C                   | °C/°F                | °C/°F                |
| Display method        | LED                  | LED                  | LCD                  | LCD                  |

## Operational Guide

### A. Switch function

Charge on the product, short press power button, When booting, the screen display the temperature, as shown in picture 1; when shutdown, the screen display OFF, as shown in picture 2



Picture 1


Picture 2

### B. 9 groups shortcut temperature adjustment

In the working state, press " + " - " switch temperature group (the default temperature value of 9 groups is: 250°C/482°F; 300°C/572°F; 325°C/617°F; 350°C/662°F; 375°C/707°F; 400°C/752°F; 425°C/797°F; 450°C/842°F; 480°C/896°F. )



## C. Setting mode

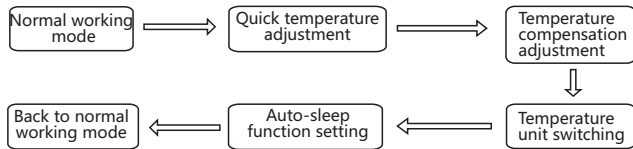

### (1) Quick temperature adjustment

While in the working state, press the power button to enter the quick temperature adjustment, press the "+" "-" button to adjust. Press fast adjustment, adjust the range: 250°C-480°C



### (2) Temperature compensation adjustment

In the fast temperature adjustment state, short press the power button to enter the temperature compensation setting, press "+" "-" adjust, long press to adjust quickly, the adjustment range: ± 50 °C / ± 90 °F



### (3) Temperature unit switching

In the temperature compensation adjustment state, short press the power button to enter the unit setting, press "+" "-" to switch C and F



### (4) Auto-sleep function ON/OFF

In the temperature unit switching state, short press the power button to enter the sleep setting, press "+" "-" adjust, 1 means ON, 0 means OFF



5

Short press the power button to enter the normal state.



## D. Heating

When the product is heated. The power light flashes, the brightness changes according to the power level, and the selected gear light is long.

## E. Warning


When "H-E" displayed on the screen, there is no temperature, which indicates that the heating element fails. When "S-E" displayed on the screen, there is a fault in sensor, which signifies that there is something wrong in sensor or the related circuit of the sensor.



## ( ST-2080/ST-2150)

### Product feature

\*Remark: ST-2080D/ST-2150D with LED display.

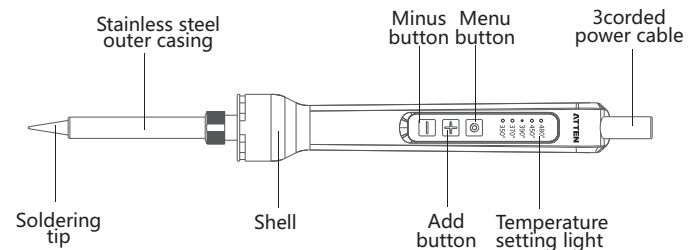

6

## Operational Guide

### A. Booting

Short press power button to boot, default 390°C lights long after booting.



### B. Temperature switching

In the working state, short press "+" "-" to switch temperature.

### C. Shutdown

In the working state, short press power button, the light of power button flashing after shutdown.



### D. Heating

 
 
 
 
 
 
 
 

When the product is heated. The power light flashes, the brightness changes according to the power level, and the selected gear light is long.

### E. Warning

When 5 lighting are all flashing, which indicates that the heating element fails.

When 5 lighting are all lighting, there is a fault in sensor, which signifies that there is something wrong in sensor or the related circuit of the sensor.

## Soldering tips

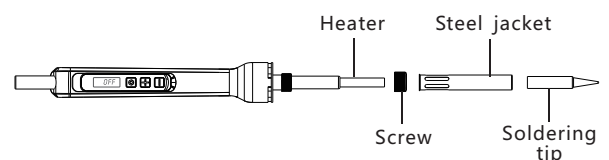

## SHENZHEN ATTEN TECHNOLOGY CO.,LTD.

Add: Floor 8, Building 2, Senyang High-tech park, 7 West Road High-tech Park, Guangming New district, Shenzhen 518132, china

Tel: 86-755-8602 1373 Fax: 86-755-8602 1365

Web: www.atten.com

Facebook: <https://www.facebook.com/attencn/>

E-mail: sales@atten.com.cn



CBN030753(A)