Vertical fitting mount for PC board [WVS series] (10 pcs / pack)

- Possible to put additional small PCB in vertical on the main PCB by fixing this part with screw.
- WVS-1: Possible to make 5mm-space from the PCB. (So it is possible to mount the component (less than 5mm) between 2PCBs.)
- Possible to fix the additional PCB with M2 screw
 (Refer 2M, 2.6M, 3M, 4M series in case of using plastic screw.)
- Material Resin part: PPS Black (UL94V-0)
 Metal part: Brass (Nickel plating)
- Applicable PCB thickness: 1.6t、1.0t、0.6t
 Screw to fix WVS series: M3 P=0.5 screw
- Screw to fix the additional PCB: M2 P=0.4 screw

Part number


| Part number | Α | Applicable PCB thickness (mm) |
|---------------|------|-------------------------------|
| WVS-1-1.6-M3 | 1.75 | 1.6 |
| WVS-1-1.0-M3 | 1.15 | 1.0 |
| WVS-1-0.6-M3 | 0.75 | 0.6 |
| WVS-1-1.6-3.2 | 1.75 | 1.6 |
| WVS-1-1.0-3.2 | 1.15 | 1.0 |
| WVS-1-0.6-3.2 | 0.75 | 0.6 |
| WVS-2-1.6-M3 | 1.75 | 1.6 |
| WVS-2-1.0-M3 | 1.15 | 1.0 |
| WVS-2-0.6-M3 | 0.75 | 0.6 |
| WVS-2-1.6-3.2 | 1.75 | 1.6 |
| WVS-2-1.0-3.2 | 1.15 | 1.0 |
| WVS-2-0.6-3.2 | 0.75 | 0.6 |

■Instruction for use


- Please Don't do the screwing M2 so strong, otherwise. this part will be open.
- Please do the screwing at the point that screw contact to the PCB.
 (Please fix the screw by the screw-lock etc)




Example of use

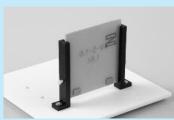

WVS-1-□-M3

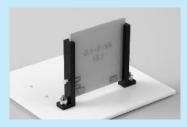

WVS-1-□-3.2




WVS-2-□-M3



WVS-2-□-3.2

■Dimensional drawing

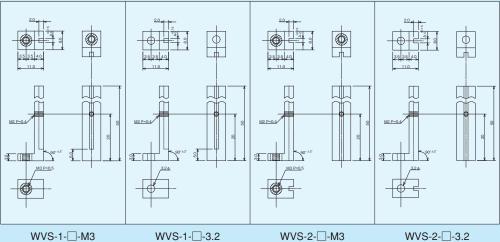

Fitting position (reference drawing)

