

www.jbctools.com

GASTEIZ COMPONENTES ELECTÓNICOS
(/Navarro Villoslada, 4 Bajo 31003 Pamplona
T: 948 245050 - 696 488800 Fax: 948 237217
electronica@gasteiz-ce.com - WWW.GASTEIZ-CE.COM

Heating Element for DR560

Ref. DSV-DR




Changing the heating element

For this operation, turn off the station or disconnect the tool.


1. Removing

Loosen the deposit lid (a), remove the screw (b) and withdraw the heating element (c).

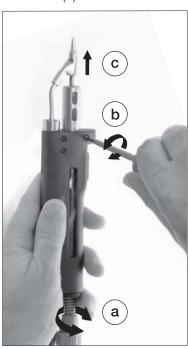

2. Placing


Insert the new heating element (a), tighten the lid (b) and the screw (c).

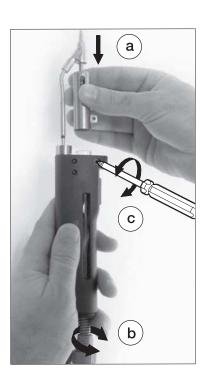

Recommended: Remove the lid in a vertical position to empty the tin residue and follow the cleaning guidelines in the tool and station manuals.


Important

For a proper connection it is essential to insert the cartridge as far as the mark

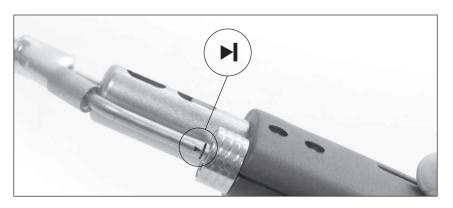

Compatibility

The DSV-DR also works with the DR5600 desoldering iron (Ref. 5600010). In this case, you must take out the washer with a pliers.

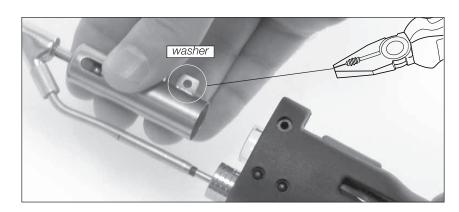

2